

Wireless upload of FlexScan FS200 & TS100 results for remote reporting using TRM® 3.0


On FS200/TS100 1 Enable Bluetooth to allow pairing



Go to Settings



Tap Bluetooth to display Bluetooth settings

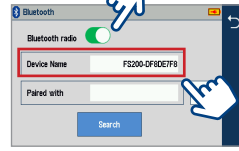

Enable Bluetooth - ; Note FS200/TS100 name

On Android Device 2 Launch App




Launch FlexScan App

On FlexScan App 3 Log in to aeRosLink then pair Android device to FS200/TS100




Tap

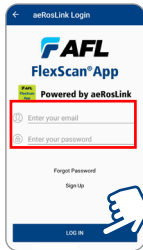


Log in to aeRosLink with aeRos login



Tap Bluetooth

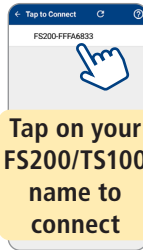


Tap on your FS200/TS100 name to connect

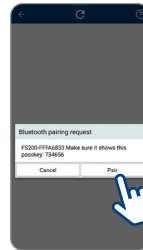


Confirm passkey

On FS200/TS100 4 Finish Pairing

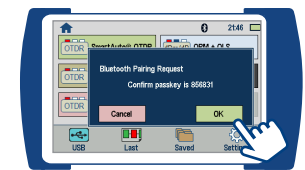


Confirm passkey

On FlexScan App 5 Verify pairing; Android device is now ready for transfer!

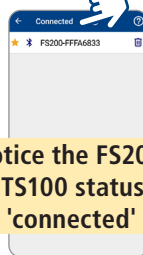

Notice the FS200/TS100 status 'connected'

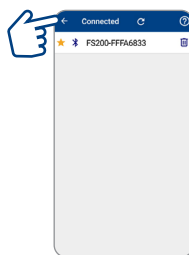

Tap Back Arrow




Notice the FS200/TS100 name displayed


Ready for transfer

Note: If pairing fails, repeat steps 1 to 5.


On FS200/TS100 6 Select test results and initiate files transfer from FS200/TS100 through FlexScan App to aeRosLink

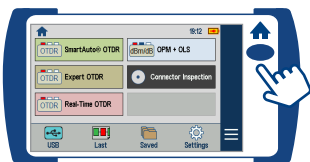


Press Home to return to Home screen

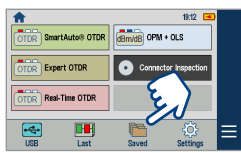


Go to Saved Files

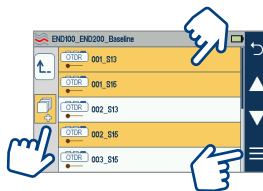

- Touch & hold to select a single file
- Or touch to select multiple files, then touch 3-bar Menu

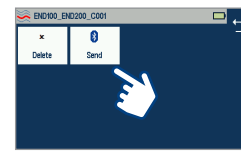

Touch Send to transfer selected files

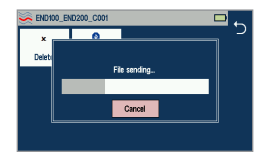

Note transfer progress

Wireless upload of FlexScan FS200 & TS100 results for remote reporting using TRM® 3.0

On FlexScan App

7

Verify test results transferred from FS200/TS100 through FlexScan App to aeRosLink



- App indicates number of transferred files
- Tap on cloud icon





Verify transfer


On TRM

8


Download results from aeRosLink to TRM and use Report Wizard to generate reports

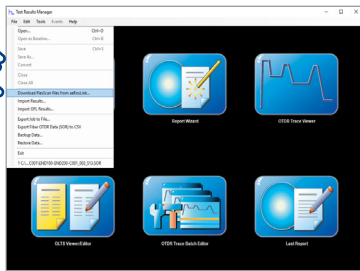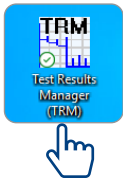


Launch TRM and open aeRosLink Download Wizard

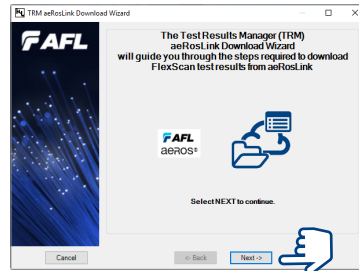


Start Download Wizard

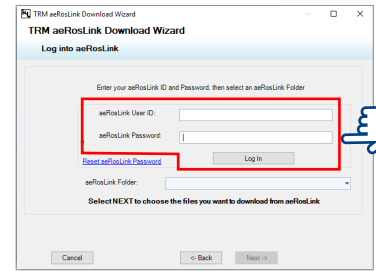


Log In to aeRosLink

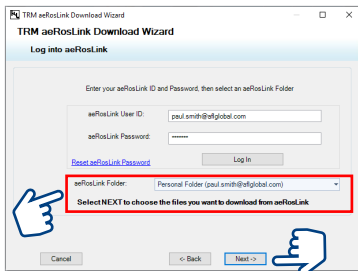

Select 'Personal' folder; tap Next

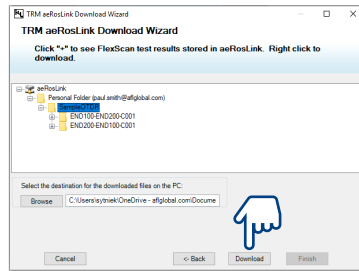


Select files and start download

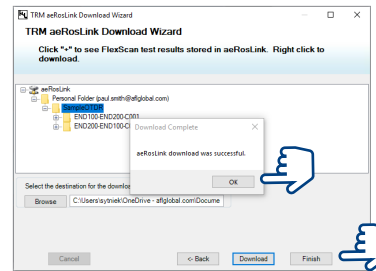


When done, click OK then Finish




Launch Report Wizard

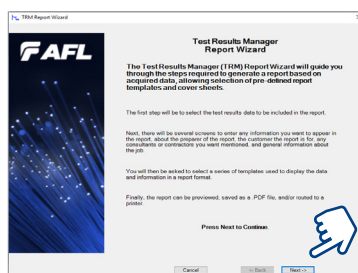

Start Wizard

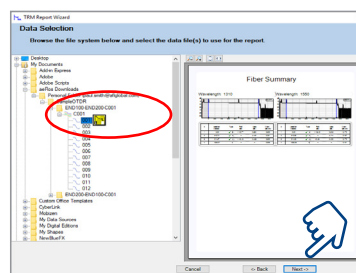

Navigate and select test results; Follow Wizard to generate reports

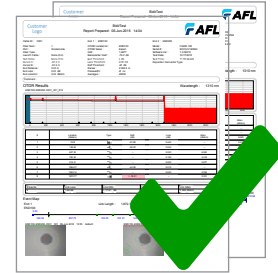

View generated reports